



Armrest Inward & Outward Adjustment
Twist knob under armrest to adjust inward and outward direction of armrest.



Arm-pad Up & Down Adjustment
Press button on stem to adjust armrest height.



Seat Height Adjustment
Lift lever under right side of seat to adjust seat height.



Adjustable Tilt Tension
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.



Arm-pad Rotation Adjustment
Rotate arm-pad in or out.