



Ratchet Back Height Adjustment
Lift up on frame of backrest to raise or lower.



Armrest Up & Down Adjustment
Press button located underneath the arm-pad and lift or press down to adjust armrests.



Backrest Tilt Angle Adjustment
Lift front button on left under seat to adjust the tilt angle of backrest.



Arm-pad Swivel Adjustment
Manually move the arm-pad to swivel.



Seat Slider Adjustment
Lift rear button on left under seat to adjust seat slider.



Seat Height Adjustment
Lift button under the right side of seat to adjust height.



Backrest Tilt Tension Adjustment
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.